

REPLACEMENT PARTS GUIDE

244L Compact Loader (PIN: 1LU244LX__B047716—)



AIR CLEANER DUST UNLOADER VALVE

[AM108172](#)

Interval (hrs) - 1000.



CAB RECIRCULATION AIR FILTER

[LW12202965](#)


Interval (hrs) - 1000.



HYDRAULIC OIL CAP BREATHER ELEMENT

[AT334649](#)

 Interval (hrs) - 1000.



PRIMARY AIR CLEANER ELEMENT

[KV16429](#)

Interval (hrs) - 1000.



SECONDARY AIR CLEANER ELEMENT

[AT171854](#)

Interval (hrs) -1000.



ENGINE ROCKER ARM COVER GASKET

[MIU803967](#)

Interval (hrs) - 2000.



ENGINE OIL FILTER

[MIU800650](#)

Interval (hrs) - 500.



PRIMARY FUEL FILTER

[MIU802421](#)

Interval (hrs) - 500.



FINAL FUEL FILTER

[MIU805005](#)

Interval (hrs) - 500.



DIESEL PARTICULATE FILTER (COMPONENT OF EXHAUST FILTER)

[MIU804752](#)

Interval (hrs) - 500.



HYDRAULIC OIL RETURN SUCTION FILTER

[LW12210161](#)

Interval (hrs) - 500.



JOHN DEERE
Genuine Parts and Service

CLICK PART NUMBER TO BUY

*See operator's manual for additional details.

OIL & CAPACITIES INFORMATION

244L Compact Loader (PIN: 1LU244LX__B047716—)

Part Description	Qty or capacity	Change Interval In Hours
John Deere Plus-50™ II Engine Oil ¹	10.0 L (2.7 gal)	500
API GL-5 Axle Differential, Transmission, and Final Drive Oil ¹ (244L)	14.8 L (3.9 gal)	1000
John Deere Hydrau™ Hydraulic Oil ¹	66.0 L (17.4 gal)	2000
"John Deere Cool-Gard™ II Premix"	12.1 L (3.2 gal)	6000
Fluid Analysis Test Kits ²		
Engine Oil	1	250
Hydraulic Oil	1	500
Axle Differential Oil	2	500
Transmission Oil	1	500
Final Drive Oil	4	500
Diesel Fuel	1	500
Engine Coolant	1	1000
¹ See operator's manual for recommended oil type and oil viscosities based on operating temperatures. ² Based on fluid analysis results, intervals may need to be adjusted for operating conditions. Consult an authorized John Deere dealer.		

Plus-50 is a trademark of Deere & Company

Hydrau is a trademark of Deere & Company

Cool-Gard is a trademark of Deere & Company



CLICK PART NUMBER TO BUY

***See operator's manual for additional details.**

Service Intervals

As Required	
<input type="checkbox"/> Check windshield washer fluid level	<input type="checkbox"/> Inspect tires and check tire pressure
<input type="checkbox"/> Lubricate hinges, latches, and frame articulation stops	<input type="checkbox"/> Service exhaust filter
<input type="checkbox"/> Check wheel nut torque	<input type="checkbox"/> Replace air cleaner elements
Every 10 Hours or Daily	
<input type="checkbox"/> Check engine oil level	<input type="checkbox"/> Lubricate quick disconnect pins and bushings
<input type="checkbox"/> Check engine coolant level	<input type="checkbox"/> Check and drain primary fuel filter and water separator
<input type="checkbox"/> Check hydraulic oil level	
Every 50 Hours	
<input type="checkbox"/> Clean air cleaner dust unloader valve	<input type="checkbox"/> Lubricate steering cylinder
<input type="checkbox"/> Lubricate loader linkage and cylinder pivots	<input type="checkbox"/> Lubricate frame hinge pivots and rear axle kingpins
<input type="checkbox"/> Check service (drum) brake oil level	
Every 100 Hours	
<input type="checkbox"/> Check and adjust accessory drive belt	
Every 250 Hours	
<input type="checkbox"/> Take engine oil sample	
Every 500 Hours	
<input type="checkbox"/> Check final drive oil level	<input type="checkbox"/> Drain fuel tank sediment
<input type="checkbox"/> Check axle differential and transmission oil levels	<input type="checkbox"/> Drain water and sediment from hydraulic tank
<input type="checkbox"/> Check battery electrolyte level and terminals	<input type="checkbox"/> Take hydraulic oil sample
<input type="checkbox"/> Drain and refill engine oil and replace filter	<input type="checkbox"/> Take axle differential oil sample
<input type="checkbox"/> Replace primary fuel filter and water separator	<input type="checkbox"/> Take final drive oil sample
<input type="checkbox"/> Replace final fuel filter	<input type="checkbox"/> Take diesel fuel sample
<input type="checkbox"/> Check and clean cooling package	<input type="checkbox"/> Take engine coolant sample
<input type="checkbox"/> Check air intake hoses	<input type="checkbox"/> Take transmission oil sample
Every 1000 Hours	
<input type="checkbox"/> Check service (drum) brake pads	<input type="checkbox"/> Replace hydraulic system return filter
<input type="checkbox"/> Drain and refill final drive oil	<input type="checkbox"/> Replace air cleaner dust unloader valve
<input type="checkbox"/> Drain and refill axle differential and transmission oil	<input type="checkbox"/> Replace cab recirculation air filter
<input type="checkbox"/> Clean engine crankcase vent	<input type="checkbox"/> Check coolant condition
Every 1500 Hours	
<input type="checkbox"/> Check and adjust engine valve lash	
Every 2000 Hours	
<input type="checkbox"/> Check axle mounting cap screw torque	<input type="checkbox"/> Clean hydraulic system strainer
<input type="checkbox"/> Drain and refill hydraulic oil	<input type="checkbox"/> Replace hydraulic oil cap breather
<input type="checkbox"/> Check service brake discs	
Every 6000 Hours	
<input type="checkbox"/> Drain and refill cooling system	