

REPLACEMENT PARTS GUIDE

744P (PIN: 1DW744PA__L_XXXXX-) 744P (PIN: 1DW744PA__D_XXXXX-)



CAB FRESH AIR FILTER
[AT191102](#)
Interval (hrs) - As Required.

CAB RECIRCULATION AIR FILTER
[AT307501](#)
Interval (hrs) - As Required.

AXLE OIL FILTER
[AH128449](#)
Interval (hrs) - 1000.

OUTER PIN SEALS
[AT341092](#)
Interval (hrs) - As Required.

SERPENTINE BELT
[T437056](#)
Interval (hrs) - As Required.

AIR CLEANER DUST UNLOADER VALVE
[T158495](#)
Interval (hrs) - As Required.

DEF DOSING UNIT FILTER - (IF EQUIPPED)
[DZ114640](#)
Interval (hrs) - 2000.

FAST FILL FUEL BREATHER (IF EQUIPPED)
[T225008](#)
Interval (hrs) - 500.

HYDRAULIC RESERVOIR BREATHER
[AM39653](#)
Interval (hrs) - 500.

PRIMARY AIR CLEANER ELEMENTS
[AT223226](#)
Interval (hrs) - 1000.

SECONDARY AIR CLEANER ELEMENTS
[AT175224](#)
Interval (hrs) - 1000.

FUEL TANK BREATHER
[H216169](#)
Interval (hrs) - 1000.

DEF IN-LINE FILTER (IF EQUIPPED)
[DZ124403](#)
Interval (hrs) - 2000.

DIESEL PARTICULATE FILTER (COMPONENT OF EXHAUST FILTER)
[DZ100174](#)
Interval (hrs) - As Required.



REPLACEMENT PARTS GUIDE

744P (PIN: 1DW744PA__L_XXXXX-) 744P (PIN: 1DW744PA__D_XXXXX-)



ENGINE ROCKER ARM COVER GASKET - FRONT (TOP AND BOTTOM)

[R526607](#)

Interval (hrs) - 2000.



ENGINE ROCKER ARM COVER GASKET - REAR

[R532724](#)

Interval (hrs) - 2000.



AUTO-LUBE INTERNAL PUMP FILTER (IF EQUIPPED)

[T420232](#)

Interval (hrs) - As Required.



DRIVELINE DAMPER

[AT426103](#)

Interval (hrs) - As Required.



ENGINE OIL FILTER

[DZ118283](#)

Interval (hrs) - 500.



PRIMARY FUEL FILTER

[RE539465](#)

Interval (hrs) - 500.



FINAL FUEL FILTER

[DZ112918](#)

Interval (hrs) - 500.



TRANSMISSION OIL FILTER

[AT468647](#)

Interval (hrs) - 2000.



HYDRAULIC SYSTEM RETURN FILTER

[AT335977](#)

Interval (hrs) - 4000.



AUXILIARY FUEL FILTER (IF EQUIPPED)

[AT365869](#)

Interval (hrs) - 500.



JOHN DEERE

Genuine Parts and Service

CLICK PART NUMBER TO BUY

*See operator's manual for additional details.

REPLACEMENT PARTS GUIDE

744P (PIN: 1DW744PA__L_XXXXX-) 744P (PIN: 1DW744PA__D_XXXXX-)

Part Description	Qty or capacity	Change Interval In Hours	
John Deere Plus-50™ II Engine Oil ²	34.0 L (9.0 gal)	500	
John Deere Hy-Gard™ Oil			
Front and Rear Axle Oil ²	55.3 L (14.6 gal)	2000	
Park Brake Oil ²	0.7 L (24 oz)	1000	
Transmission Oil ²	28.0 L (7.4 gal)	2000	
John Deere Hydrau™ Hydraulic System Oil ²	142.0 L (37.5 gal)	4000	
John Deere Cool-Gard™ II Pre-Mix	48.0 L (12.7 gal)	6000	
Fluid Analysis Test Kits³			
Engine Oil	AT346594	1	250
Transmission Oil	AT346594	1	500
Axle Oil	AT346594	2	500
Park Brake	AT346594	1	500
Hydraulic Oil	AT346594	1	500
Diesel Fuel	TY27329	1	500
Engine Coolant	TY27787	1	500
² See operator's manual for recommended oil type and oil viscosities based on operating temperatures. ³ Based on fluid analysis results, intervals may need to be adjusted for operating conditions. Consult an authorized John Deere dealer.			

Plus-50 is a trademark of Deere & Company
 Hydrau is a trademark of Deere & Company
 Hy-Gard is a trademark of Deere & Company
 Cool-Gard is a trademark of Deere & Company



CLICK PART NUMBER TO BUY

*See operator's manual for additional details.

Service Intervals

As Required	
<input type="checkbox"/> Inspect tires and check pressure	<input type="checkbox"/> Clean cooler cores
<input type="checkbox"/> Check wheel bolt/nut torque	<input type="checkbox"/> Check windshield washer fluid level
<input type="checkbox"/> Inspect engine air cleaner elements	<input type="checkbox"/> Drain water from primary fuel filter with water separator
<input type="checkbox"/> Inspect serpentine belt	<input type="checkbox"/> Drain water from auxiliary fuel filter with water separator
<input type="checkbox"/> Replace fast fill fuel breather (if equipped)	<input type="checkbox"/> Check and clean or replace cab fresh air filter
<input type="checkbox"/> Check and clean fuel sending unit pick-up screen	<input type="checkbox"/> Check and clean or replace cab recirculating air filter
<input type="checkbox"/> Refill auto-lube grease reservoir (if equipped)	<input type="checkbox"/> Check and clean air cleaner dust unloader valve
<input type="checkbox"/> Clean hydraulic pump case drain in-line screens	<input type="checkbox"/> Drain, flush, and refill fuel tank
<input type="checkbox"/> Check rear camera and radar object detection (ROD) system (if equipped)	<input type="checkbox"/> Clean and tighten battery terminals
Every 10 Hours or Daily	
<input type="checkbox"/> Inspect outer pin seals	<input type="checkbox"/> Check hydraulic system oil level
<input type="checkbox"/> Check coolant level at surge tank	<input type="checkbox"/> Check transmission oil level
<input type="checkbox"/> Check engine oil level	<input type="checkbox"/> Inspect auto-lube grease lines for damage and leakage (if equipped)
<input type="checkbox"/> Clean air cleaner dust unloader valve, replace if damaged	<input type="checkbox"/> Inspect auto-lube grease reservoir and manifolds for damage and leakage (if equipped)
Initial Service—100 Hours	
<input type="checkbox"/> Replace axle oil filters	<input type="checkbox"/> Drain and refill front and rear axle oil
Every 100 Hours	
<input type="checkbox"/> Lubricate loader linkage and cylinder pivots (less auto-lube)	
Every 250 Hours	
<input type="checkbox"/> Take engine oil sample	
Every 500 Hours	
<input type="checkbox"/> Lubricate front and rear shaft seals on park brake	<input type="checkbox"/> Check front and rear axle oil level
<input type="checkbox"/> Lubricate driveline upper and lower sliding joints and lower U-joints	<input type="checkbox"/> Check air intake hoses and charge air cooler tube couplings
<input type="checkbox"/> Lubricate front and rear axle shaft seals	<input type="checkbox"/> Check park brake oil level
<input type="checkbox"/> Drain and refill engine oil and replace filter	<input type="checkbox"/> Check hybrid battery electrolyte level (if equipped)
<input type="checkbox"/> Replace fast fill fuel breather filter (if equipped)	<input type="checkbox"/> Take axle oil sample
<input type="checkbox"/> Replace primary fuel filter with water separator	<input type="checkbox"/> Take park brake oil sample
<input type="checkbox"/> Replace auxiliary fuel filter with water separator (if equipped)	<input type="checkbox"/> Take transmission oil sample
<input type="checkbox"/> Replace final fuel filter	<input type="checkbox"/> Take hydraulic oil sample
<input type="checkbox"/> Replace hydraulic reservoir breather filter	<input type="checkbox"/> Take diesel fuel sample
<input type="checkbox"/> Inspect auto-lube internal pump filter (if equipped)	<input type="checkbox"/> Take engine coolant sample
<input type="checkbox"/> Check ride control accumulator	
Every 1000 Hours	
<input type="checkbox"/> Replace engine air cleaner elements	<input type="checkbox"/> Replace fuel tank breather filter
<input type="checkbox"/> Lubricate frame hinge pivots (less autolube)	<input type="checkbox"/> Check coolant condition
<input type="checkbox"/> Drain and refill park brake oil	
<input type="checkbox"/> Replace axle oil filters	

Service Intervals

Every 2000 Hours	
<input type="checkbox"/> Check and adjust engine valve lash	<input type="checkbox"/> Drain and refill transmission oil and replace filters
<input type="checkbox"/> Rerun transmission clutch calibration (cab monitor)	<input type="checkbox"/> Drain and refill front and rear axle oil
Every 4000 Hours	
<input type="checkbox"/> Clean hydraulic system fill strainer	<input type="checkbox"/> Drain, flush, and refill hydraulic system oil
<input type="checkbox"/> Replace hydraulic system return filters	
Every 5000 Hours	
<input type="checkbox"/> Check driveline damper for cracks	
Every 6000 Hours	
<input type="checkbox"/> Drain and refill cooling system	