

# REPLACEMENT PARTS GUIDE

## 6J Series - 6100J ( - 002165) Tractors



### CAB



**FRESH AIR FILTER**  
[AL225552](#)

Replace annually.

1

### ENGINE



**PRIMARY AIR FILTER**  
[AL172780](#)



**SECONDARY AIR FILTER**  
[AL150288](#)

Replace every 250 hours and annually.

2

### HYDRAULIC & TRANSMISSION



**OIL FILTER**  
[AL221066](#)  
**HYDRAULIC OIL FILTER**  
[AL203061](#)

Replace initially after 100 hours and every 750 hours.

3

### ENGINE



**PRIMARY FUEL FILTER**  
[DQ24057](#)



**FINAL FUEL FILTER**  
[RE67227](#) (-721167)

[RE62418](#) (721168-)

Replace every 250 hours and annually.

4



**OIL FILTER**  
[RE59754](#)

Replace initially after 100 hours and every 375 hours, every 500 hours and annually.

6



**JOHN DEERE**  
Genuine Parts and Service

# CAPACITIES

## 6J Series - 6100J ( - 002165) Tractors

**CAPACITIES (Approximate):**

**Fuel Tank:**  
..... 185 L (48.9 gal)

**Cooling System:**  
**Cool-Gard™ II**  
..... 20 L (5.3 gal)

**Transmission and Hydraulic System:**  
**Hy-Gard™**

..... 65 L (17.17 gal)

**Front Axle:**  
**Hy-Gard™**  
Front Axle Differential Housing ..... 7.5 L (2 gal)  
Front Axle Final Drive Housing (each)..... 0.75 L (0.2 gal)

# REPLACEMENT PARTS GUIDE

## 6J Series - 6100J ( - 002165) Tractors

### ENGINE



#### BRAKE DISK

[RE35512](#) (Perma Clutch II)  
[RE321696](#) (PowrQuad™)  
[AL171954](#)



#### CLUTCH DISK

[RE326609](#) (Direct Drive)  
[RE321692](#) (Reverser, W/ Traction)



#### BATTERY

[SJ10989](#)



#### ALTERNATOR

[AL219434](#) (W/ Pulley)  
[AL166645](#)



### CAB

#### SEAT



[AL219772](#) (W/ Mechanical Suspension)  
[DQ62615](#) (Back) (W/ Mechanical Suspension)  
[DQ62617](#) (Base) (W/ Mechanical Suspension)  
[BL16299](#) (W/ Air Suspension)  
[AL210442](#) (Bottom) (W/ Air Suspension)  
[AL210441](#) (Back) (W/ Air Suspension)

### AXLE



#### TIE ROD

[AL150098](#) (Foot Throttle)  
[DQ67133](#) (Steering Cylinder)  
[DQ67134](#) (Steering Cylinder)



**JOHN DEERE**  
Genuine Parts and Service