

REPLACEMENT PARTS GUIDE

755K Crawler Loader (PIN: 1T0755KX__E192242-339325)



Cab Fresh Air Filter
AT191102
 Interval (hrs) - As required.

HYDROSTATIC FAN OIL FILTER
T280007
 Interval (hrs) - 2000.

HYDRAULIC TANK BREATHER
AM39653
 Interval (hrs) - 2000.

HYDRAULIC OIL FILTER
RE174130
 Interval (hrs) - 2000.

BUCKET LINK JOINTS
AT330664
 Interval (hrs) - 2000.

BOOM-TO-BUCKET JOINTS
AT341091
 Interval (hrs) - 2000.

HYDROSTATIC TRANSMISSION OIL FILTER
AT318160
 Interval (hrs) - 2000.



CAB RECIRCULATING AIR FILTER
AT315957
 Interval (hrs) - As required.

ENGINE AIR FILTER ELEMENT—PRIMARY
AT223226
 Interval (hrs) - As required.

ENGINE AIR FILTER ELEMENT—SECONDARY
AT175224
 Interval (hrs) - As required.

OPEN CRANKSHAFT VENTILATION (OCV) FILTER - RE540710
 Interval (hrs) - 2000.

ENGINE ROCKER ARM COVER GASKET
R528743
 Interval (hrs) - 2000.

PRIMARY & FINAL FUEL FILTER KIT
RE541746
 Interval (hrs) - 500.









AUXILIARY FUEL FILTER (IF EQUIPPED)
AT365870
 Interval (hrs) - 500.

Diesel Particulate Filter (component of exhaust filter) - RE541833
 Interval (hrs) - As Required.

ENGINE OIL FILTER
RE539279
 Interval (hrs) - 500.

OILS AND PARTS INFORMATION

755K Crawler Loader Engine 6068HT084

Part Description	Part Number	Qty or capacity	Change Interval In Hours
John Deere Plus-50™ II Engine Oil ¹ 	TY26669	28.0 L(7.4 gal)	500
John Deere Hy-Gard™ Inner Final Drive Oil (each side) ¹ 	TY6354	7.9 L (2.1 gal)	1000
"John Deere Hy-Gard™ Outer Final Drive Oil (each side)" ¹ 	TY6354	16.3 L (4.3 gal)	1000
API GL-5 Track Frame Pivot Shaft Oil ¹ 	TY6354	1.7 L (1.8 qt)	1000
John Deere Hydrau™ Hydrostatic Transmission Oil ¹ 	TY27367	106.0 L (28.0 gal)	2000
John Deere Hydrau™ Hydraulic System Oil ¹ 	TY27367	121.0 L (32.0 gal)	2000
John Deere COOL-GARD™ II Pre-Mix 	TY26575	32.0 L (8.5 gal)	6000
Coolant Extender 	TY26603	As Required	As Required
Fluid Analysis Kits ²			
Diesel Engine Oil	AT346594	1	500
Hydrostatic Transmission Oil	AT346594	1	500
Inner and Outer Final Drive Oil	AT346594	4	500
Hydraulic Oil	AT346594	1	500
Diesel Fuel	AT180344	1	500
COOL-GARD™ II Test Strips	TY26605	1	500
Engine Coolant	TY26873	1	500

¹See operator's manual for recommended oil type and oil viscosities based on operating temperatures.

²Based on fluid analysis results, intervals may need to be adjusted for operating conditions. See an authorized John Deere dealer.

Plus-50 is a trademark of Deere & Company

Hy-Gard is a trademark of Deere & Company

Hydrau is a trademark of Deere & Company

COOL-GARD is a trademark of Deere & Company



CLICK PART NUMBER TO BUY

*See operator's manual for additional details.

Service Intervals

As Required	
• Inspect belt and check tension	• Check and adjust track sag
• Drain sediment from fuel tank	• Check engine air filter restriction indicator
• Clean or replace cab fresh air filter	• Clean or replace cab recirculating air filter
• Clean cooler cores	• Service exhaust filter
• Add coolant extender as indicated by COOL-GARD™ II test strips	
Every 10 Hours or Daily	
• Check engine oil level	• Check hydrostatic transmission oil level
• Check surge tank coolant level	• Check hydraulic system oil level
• Inspect outer pin seals—if equipped	• Check primary fuel filter and water separator
• Check auxiliary fuel filter and water separator—if equipped	
Every 50 Hours	
• Lubricate right and left end crossbar pivots	• Lubricate multipurpose bucket—if equipped
• Lubricate rear ripper—if equipped	• Lubricate loader linkage and cylinder pivots
Every 250 Hours	
• Check inner and outer final drive housing oil levels	• Take engine oil sample
Every 500 Hours	
• Drain and refill engine oil and replace filter	• Take hydrostatic transmission oil sample
• Check battery electrolyte level; clean and tighten terminals	• Take engine coolant sample
• Replace primary and final fuel filters	• Take hydraulic oil sample
• Replace auxiliary fuel filter and water separator—if equipped	• Take inner and outer final drive oil sample
• Take diesel fuel sample	
Every 1000 Hours	
• Check air intake hose	• Check coolant
• Drain and refill final drive housing oil	• Check track frame pivot shaft bushing oil level
Every 2000 Hours	
• Replace open crankcase ventilation (OCV) filter	• Check and adjust engine valve lash
• Replace outer pin seals—if equipped	• Drain and refill hydraulic system oil and replace filter
• Replace hydraulic tank breather filter	• Drain and refill hydrostatic transmission oil and replace hydrostatic charge and fan oil filters
Every 5000 Hours	
• Inspect after treatment device mounts	
Every 6000 Hours	
• Drain and refill engine cooling system	