

FILTER OVERVIEW WITH SERVICE INTERVALS AND CAPACITIES

5015 Series - 5615 and 5715 Tractors (Turkish Edition)

HYDRAULIC

FUEL FILTER

[RE45864](#) (all)

Replace after initial 100 hours, then every 500 hours.

(Click here for [capacity](#))



ENGINE

OIL FILTER

[RE504836](#) (all)

Replace after initial 100 hours, change after every 250 hours. If diesel fuel has a sulfur content greater than 0.7 percent, reduce service interval to half.

(Click here for [capacity](#))

ENGINE


PRIMARY AIR FILTER

[AT171853](#) (all)

SECONDARY AIR FILTER

[AT171854](#) (all)

Clean as required. Change every 1000 hours or annually, whatever occurs first or after 6 cleanliness of primary element.

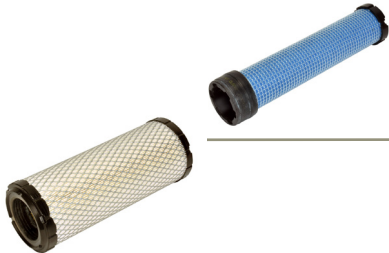

HYDRAULIC

FINAL FUEL FILTER

[RE60021](#) (all)

Replace after every 250 hours.

(Click here for [capacity](#))



http://www.deere.com/en_US/parts/service/support/filter/overviews

CAPACITIES

5015 Series - 5615 and 5715 Tractors (Turkish Edition)

CAPACITIES (Approximate):

Fuel Tank:

.....95 L (25 gal)

Cooling System:

Cool-Gard™ II

.....10.8 L (2.3 gal)

Crankcase with Filter:

Plus-50 II™

.....8.5 L (1.86 gal)

Transmission/Hydraulics:

Hy-Gard™

2WD.....38 L (10 gal)

MFWD41.8 L (11 gal)

Mechanical Front Wheel Drive (MFWD) Axle:

Hy-Gard™

Axle Housing5 L (1.09 gal)

Wheel Hub (Each)0.6 L (0.13 gal)

[Return to Filter Overview](#)