
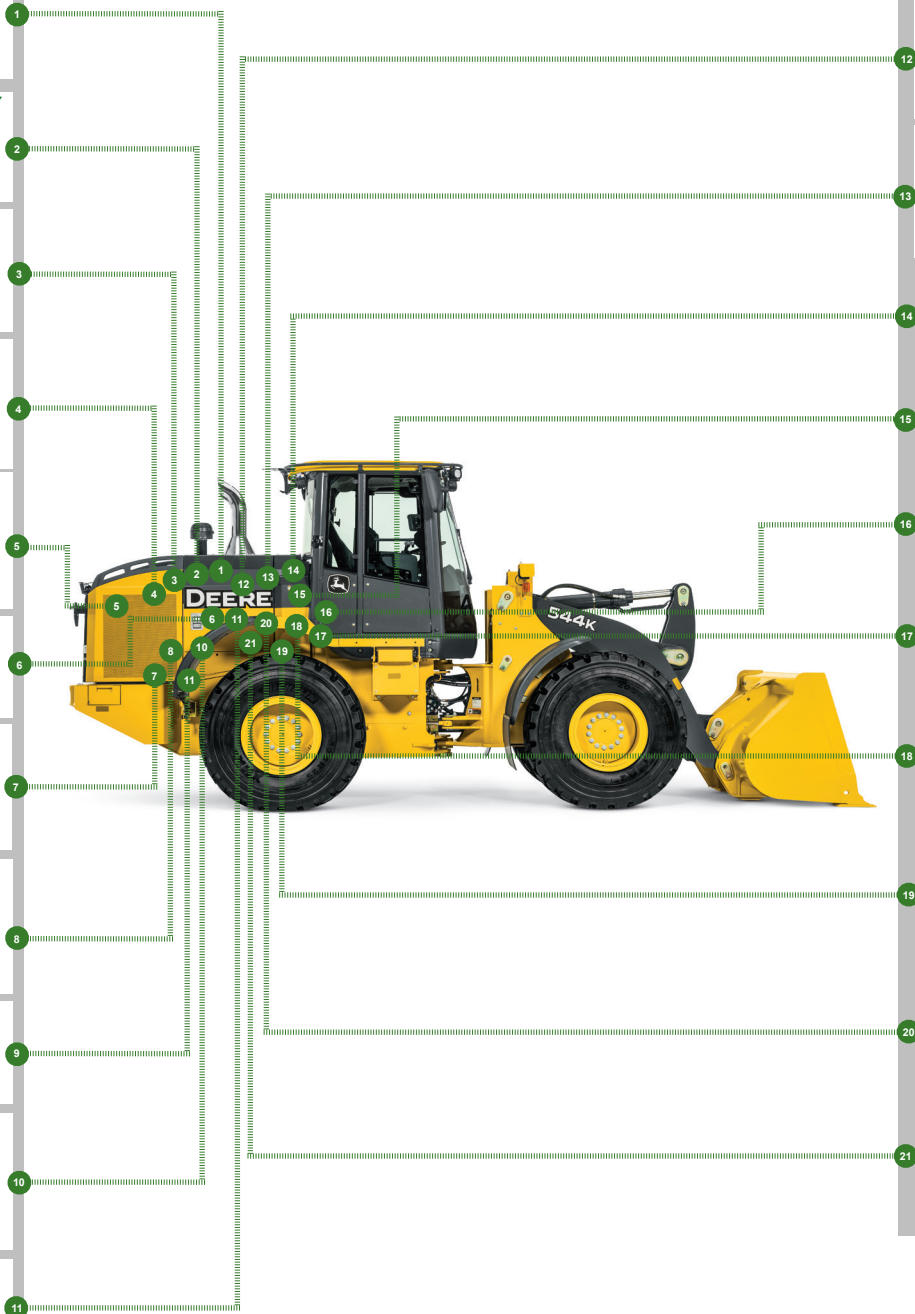




 
 






REPLACEMENT PARTS GUIDE

544K 4WD Loader (PIN: 1DW544K__ _F670309—)

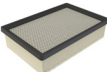

	DIESEL PARTICULATE FILTER (COMPONENT OF EXHAUST FILTER) RE565702 Interval (hrs) - As Required.
	ENGINE AIR FILTER ELEMENT—PRIMARY AT178516 Interval (hrs) - 1000.
	ENGINE AIR CLEANER DUST UNLOADER VALVE R48568 Interval (hrs) - 1000.
	HYDRAULIC RESERVOIR BREATHER FILTER AM39653 Interval (hrs) - 500.
	ENGINE AIR FILTER ELEMENT—SECONDARY AT178517 Interval (hrs) :1000
	PRIMARY FUEL FILTER RE551507 Interval (hrs) - 500.
	OPEN CRANKCASE VENTILATION (OCV) FILTER DZ105100 Interval (hrs) - 2000.
	DIESEL EXHAUST FLUID (DEF) TANK BREATHER FILTER H216169 Interval (hrs) - 4000
	TRANSMISSION OIL FILTER AT468647 Interval (hrs) - 2000.
	DIESEL EXHAUST FLUID (DEF) DOSING UNIT FILTER RE554498 Interval (hrs) - 2000.
	FUEL TANK BREATHER FILTER H216169 Interval (hrs) - 1000.



	HYDRAULIC SYSTEM RETURN FILTER AT335977 Interval (hrs) - 4000.
	ENGINE ROCKER ARM COVER GASKET R528743 Interval (hrs) - 1000.
	CAB RECIRCULATING FILTER AT307501 Interval (hrs):As Required.
	CAB FRESH AIR FILTER AT191102 Interval (hrs) - As Rquired.
	FINAL FUEL FILTER RE560681 Interval (hrs) - 500.
	ENGINE OIL FILTER RE539279 Interval (hrs) - 500.
	DIESEL EXHAUST FLUID (DEF) HEADER SUCTION SCREEN (S.N. —675480) DZ110562 Interval (hrs) - 2000.
	DIESEL EXHAUST FLUID (DEF) HEADER SUCTION FILTER (S.N. 675481—) AT502963 Interval (hrs) - 4000.
	DIESEL EXHAUST FLUID (DEF) BAFFLE (S.N. 675481—) AT502964 Interval (hrs) - As Required.
	AXLE OIL FILTERS—IF EQUIPPED AT367635 Interval (hrs) - 1000.



OIL & CAPACITIES INFORMATION

544K 4WD Loader (PIN: 1DW544K__F670309—)

Part Description	Qty or capacity	Change Interval In Hours
John Deere Plus-50™ II Engine Oil ²	19.0 L (5.0 gal)	500
John Deere Hy-Gard™ Front Axle Oil ²	17.0 L (4.5 gal)	2000
John Deere Hy-Gard™ Rear Axle Oil ³	17.0 L (4.5 gal)	2000
John Deere Hy-Gard™ Park Brake Oil ³	300.0 mL (10.0 fl oz)	1000
John Deere Hy-Gard™ Transmission Oil ³	21.5 L (5.6 gal)	2000
John Deere Hydrau™ Hydraulic Oil ³	118.7 L (31.3 gal)	4000
John Deere Cool-Gard™ II Pre-Mix	23.5 L v(6.2 gal)	6000

OIL & CAPACITIES INFORMATION

544K 4WD Loader (PIN: 1DW544K__ _F670309—)

Part Description	Qty or capacity	Change Interval In Hours
Fluid Analysis Test Kits⁴		
Diesel Engine Oil	1	250
Transmission Oil	1	500
Hydraulic Oil	1	500
Park Brake and Axle Oil	3	500
Diesel Fuel	1	500
Engine Coolant	1	500
<p>²Reduce service intervals to 1500 hours in severe applications, which run the torque converter at high loads for more than approximately 25% of the time.</p> <p>³See operator's manual for recommended oil type and oil viscosities based on operating temperatures.</p> <p>⁴Based on fluid analysis results, intervals may need to be adjusted for operating conditions. Consult an authorized John Deere dealer.</p>		

Plus-50 is a trademark of Deere & Company
Hydrau is a trademark of Deere & Company
Hy-Gard is a trademark of Deere & Company
Cool-Gard is a trademark of Deere & Company



CLICK PART NUMBER TO BUY

***See operator's manual for additional details.**

Service Intervals

As Required	
<input type="checkbox"/> Check windshield washer fluid level	<input type="checkbox"/> Clean fuel sending unit pickup screen
<input type="checkbox"/> Inspect tires and check pressure	<input type="checkbox"/> Drain water from primary fuel filter with water separator
<input type="checkbox"/> Check wheel bolt torque	<input type="checkbox"/> Service exhaust filter
<input type="checkbox"/> Inspect engine air cleaner elements	<input type="checkbox"/> Drain, flush, and refill fuel tank
<input type="checkbox"/> Inspect air conditioner compressor and alternator belt	<input type="checkbox"/> Check and clean or replace cab fresh air filter
<input type="checkbox"/> Clean cooler cores	<input type="checkbox"/> Check and clean or replace cab recirculating air filter
<input type="checkbox"/> Check rear camera and radar object detection (ROD) system (if equipped)	
Every 10 Hours or Daily	
<input type="checkbox"/> Clean air cleaner dust unloader valve	<input type="checkbox"/> Check hydraulic system oil level
<input type="checkbox"/> Check coolant level at surge tank	<input type="checkbox"/> Check transmission oil level
<input type="checkbox"/> Check engine oil level	<input type="checkbox"/> Inspect outer pin seals (if equipped)
Every 100 Hours	
<input type="checkbox"/> Lubricate loader linkage and cylinder pivots	
Initial Service—250 Hours	
<input type="checkbox"/> Drain and refill front and rear axle oil	<input type="checkbox"/> Replace axle oil filters (if equipped)
Every 250 Hours	
<input type="checkbox"/> Take engine oil sample	
Every 500 Hours	
<input type="checkbox"/> Lubricate driveline upper and lower sliding joints and lower U-joints	<input type="checkbox"/> Check park brake oil level
<input type="checkbox"/> Check front and rear axle oil level	<input type="checkbox"/> Lubricate front and rear shaft seals on park brake
<input type="checkbox"/> Lubricate front and rear axle shaft seals	<input type="checkbox"/> Check ride control accumulator (if equipped)
<input type="checkbox"/> Check battery electrolyte level and terminals	<input type="checkbox"/> Take transmission oil sample
<input type="checkbox"/> Check air intake hoses and charge air cooler tube couplings	<input type="checkbox"/> Take hydraulic oil sample
<input type="checkbox"/> Drain and refill engine oil and replace filter	<input type="checkbox"/> Take axle oil sample
<input type="checkbox"/> Replace primary fuel filter with water separator	<input type="checkbox"/> Take park brake oil sample
<input type="checkbox"/> Replace final fuel filter	<input type="checkbox"/> Take diesel fuel sample
<input type="checkbox"/> Replace hydraulic reservoir breather filter	<input type="checkbox"/> Take engine coolant sample
Every 1000 Hours	
<input type="checkbox"/> Replace axle oil filters (if equipped)	<input type="checkbox"/> Check coolant condition
<input type="checkbox"/> Replace air cleaner dust unloader valve	<input type="checkbox"/> Lubricate frame hinge pivots
<input type="checkbox"/> Replace engine air cleaner elements	<input type="checkbox"/> Drain and refill park brake oil
<input type="checkbox"/> Replace fuel tank breather filter	
Every 2000 Hours	
<input type="checkbox"/> Replace open crankcase ventilation (OCV) filter	<input type="checkbox"/> Clean front and rear axle oil recirculation screens (if equipped)
<input type="checkbox"/> Replace outer pin seals (if equipped)	<input type="checkbox"/> Drain and refill front and rear axle oil
<input type="checkbox"/> Replace diesel exhaust fluid (DEF) dosing unit filter	<input type="checkbox"/> Drain and refill transmission oil and replace filter ²
<input type="checkbox"/> Clean diesel exhaust fluid (DEF) tank (S.N. —675480)	<input type="checkbox"/> Rerun transmission clutch calibration (cab monitor)
<input type="checkbox"/> Replace diesel exhaust fluid (DEF) header suction screen (S.N. —675480)	<input type="checkbox"/> Check and adjust engine valve lash
Every 4000 Hours	
<input type="checkbox"/> Clean hydraulic system fill strainer	<input type="checkbox"/> Replace diesel exhaust fluid (DEF) tank breather filter
<input type="checkbox"/> Clean hydraulic pump case drain in-line screen	<input type="checkbox"/> Inspect diesel exhaust fluid (DEF) baffle (S.N. 675481—)
<input type="checkbox"/> Replace hydraulic system return filter	<input type="checkbox"/> Clean diesel exhaust fluid (DEF) tank (S.N. 675481—)
<input type="checkbox"/> Drain, flush, and refill hydraulic system oil	<input type="checkbox"/> Replace diesel exhaust fluid (DEF) header suction filter (S.N. 675481—)
Every 5000 Hours	
<input type="checkbox"/> Check driveline damper for cracks	
Every 6000 Hours	
<input type="checkbox"/> Drain and refill cooling system	



JOHN DEERE
Genuine Parts and Service