

# REPLACEMENT PARTS GUIDE

## 772G and 772GP (PIN: 1DW772G\_\_ \_F678818—680877)



### REAR AXLE BREATHER FILTER



[AT101565](#)

Interval (hrs) - 2000.

1

### HYDRAULIC OIL FILTER



[AT367840](#)

Interval (hrs) - 2000.

2

### DIESEL EXHAUST FLUID (DEF) DOSING UNIT FILTER - [DZ114640](#)



Interval (hrs) - 2000.

3

### HYDRAULIC TANK BREATHER



[AT101565](#)

Interval (hrs) - 2000.

4

### FUEL TANK BREATHER



[H216169](#)

Interval (hrs) - 1000.

5

### DIESEL EXHAUST FLUID (DEF) TANK BREATHER - [H216169](#)



Interval (hrs) - 4000.

6

### DIESEL EXHAUST FLUID (DEF) HEADER SUCTION FILTER AND BAFFLE - [AT502964](#)



Interval (hrs) - 4000.

7

### TRANSMISSION OIL FILTER



[AT335492](#)

Interval (hrs) - 2000.

8

### AXLE OIL FILTER



[AT335492](#)

Interval (hrs) - 2000.

9

### AUXILIARY FUEL FILTER ELEMENT (IF EQUIPPED) - [AT365869](#)



Interval (hrs) - 500.

10

### ENGINE OIL FILTER



[DZ118283](#)

Interval (hrs) - 500.

11



### FAST FILL FUEL BREATHER FILTER (IF EQUIPPED) - [T225008](#)

Interval (hrs) - 1000.

12



### PRIMARY AIR FILTER ELEMENT, STANDARD 13" - [AT175223](#)

Interval (hrs) - As Required.

13



### PRIMARY AIR FILTER ELEMENT, HEAVY DUTY 14" - [AT311066](#)

Interval (hrs) - As Required.

14



### SECONDARY AIR FILTER ELEMENT, STANDARD 13" - [AT175224](#)

Interval (hrs) - As Required.

15



### SECONDARY AIR FILTER ELEMENT, HEAVY-DUTY 14" - [AT311067](#)

Interval (hrs) - As Required.

16



### CAB FRESH AIR FILTER [AT191102](#)

Interval (hrs) - As Required.

17



### CAB RECIRCULATION AIR FILTER [AT307501](#)

Interval (hrs) - As Required.

18



### DIESEL PARTICULATE FILTER (COMPONENT OF EXHAUST FILTER) [RE563694](#)

Interval (hrs) - As Required.

19



### ENGINE ROCKER ARM COVER GASKET [R526607](#)

Interval (hrs) - 2000.

20



### FINAL FUEL FILTER ELEMENT [DZ112918](#)

Interval (hrs) - 500.

21



### PRIMARY FUEL FILTER ELEMENT [RE539465](#)

Interval (hrs) - 500.

22








CLICK PART NUMBER TO BUY

\*See operator's manual for additional details.

Apr 2022. Release Date.

# PARTS AND CAPACITIES INFORMATION

## 772G and 772GP (PIN: 1DW772G\_\_ \_F678818—680877)

Part Description	Part Number	Qty or capacity	Change Interval In Hours
John Deere Plus-50™ II Engine Oil <sup>2</sup> 	<a href="#">TY26674</a>	28.4 L (7.5 gal)	500
John Deere Hydrau™ XR Hydraulic Oil <sup>2</sup> 	<a href="#">TY27316</a>	60.5 L (16.0 gal)	4000
John Deere Hy-Gard™ 6WD Hub Oil <sup>2</sup> (if equipped) (each) 	<a href="#">TY6354</a>	7.2 L (2.0 gal)	1000
John Deere Hy-Gard™ Transmission, Axle, Circle Gear Case, and Tandem Oil <sup>2</sup> 	<a href="#">TY6354</a>	72.1 L (19.0 gal)	2000
John Deere Cool-Gard™ II Pre-Mix 	<a href="#">TY26575</a>	55.0 L (14.5 gal)	6000
Fluid Analysis Kits <sup>3</sup>			
Diesel Engine Oil	<a href="#">AT346594</a>	1	250
Transmission Oil	<a href="#">AT346594</a>	1	500
Axle Oil	<a href="#">AT346594</a>	1	500
Tandem Oil	<a href="#">AT346594</a>	2	500
Hydraulic Oil	<a href="#">AT346594</a>	1	500
6WD Hub Oil (if equipped)	<a href="#">AT346594</a>	2	500
Diesel Fuel	<a href="#">TY27329</a>	1	500
Engine Coolant	<a href="#">TY26873</a>	1	500
<p><sup>2</sup>See operator's manual for recommended oil type and oil viscosities based on operating temperatures.</p> <p><sup>3</sup>Based on fluid analysis results, intervals may need to be adjusted for operating conditions. consult a local John Deere dealer.</p>			

Plus-50 is a trademark of Deere & Company  
Hy-Gard is a trademark of Deere & Company  
Hydrau is a trademark of Deere & Company  
COOL-GARD is a trademark of Deere & Company



CLICK PART NUMBER TO BUY

\*See operator's manual for additional details.

## Service Intervals

As Required	
<input type="checkbox"/> Service exhaust filter	<input type="checkbox"/> Inspect accessory belt and belt tensioner spring
<input type="checkbox"/> Clean cooler cores	<input type="checkbox"/> Replace engine air intake filter elements
<input type="checkbox"/> Clean and tighten battery terminals	<input type="checkbox"/> Drain fuel tank sump
<input type="checkbox"/> Clean battery compartment	<input type="checkbox"/> Drain primary fuel filter and water separator
<input type="checkbox"/> Clean or replace cab fresh air and cab recirculation filters	<input type="checkbox"/> Drain auxiliary fuel filter and water separator (if equipped)
<input type="checkbox"/> Lubricate circle pinion	<input type="checkbox"/> Check rear camera (if equipped)
<input type="checkbox"/> Check tire pressure	<input type="checkbox"/> Transmission control unit (TCU) calibration
<input type="checkbox"/> Check blade circle and draft frame wear inserts	<input type="checkbox"/> 6WD controller calibration (if equipped)
<input type="checkbox"/> Check blade lift cylinder sockets	<input type="checkbox"/> Cross slope sensors calibration (if equipped)
<input type="checkbox"/> Lubricate saddle locking pin holes	<input type="checkbox"/> Hydraulic valves calibration (if equipped)
<input type="checkbox"/> Blade sideshift wear insert adjustment	<input type="checkbox"/> Replace starting fluid cylinder (if equipped)
Every 10 Hours or Daily	
<input type="checkbox"/> Check hydraulic tank oil level	<input type="checkbox"/> Check engine oil level
<input type="checkbox"/> Check transmission oil level	<input type="checkbox"/> Check engine coolant level in surge tank
Every 50 Hours	
<input type="checkbox"/> Lubricate frame hinge pivots	<input type="checkbox"/> Lubricate front axle lean bar pivot
<input type="checkbox"/> Lubricate lift cylinders	<input type="checkbox"/> Lubricate front axle steering pin
<input type="checkbox"/> Lubricate draft frame ball	<input type="checkbox"/> Lubricate tie rod ends
<input type="checkbox"/> Lubricate front mounted scarifier or dozer blade (if equipped)	<input type="checkbox"/> Lubricate steering cylinders
<input type="checkbox"/> Lubricate Balderson™ style front lift group (if equipped)	<input type="checkbox"/> Lubricate midmount scarifier (if equipped)
<input type="checkbox"/> Lubricate front axle oscillation pin	<input type="checkbox"/> Lubricate circle sideshift cylinder
<input type="checkbox"/> Lubricate front axle lean pivot casting pins	<input type="checkbox"/> Lubricate saddle locking pin
Every 250 Hours	
<input type="checkbox"/> Check battery electrolyte level and terminals	<input type="checkbox"/> Take engine oil sample
Initial Service—500 Hours <sup>1</sup>	
<input type="checkbox"/> Replace axle oil filter	<input type="checkbox"/> Replace transmission oil filter
Every 500 Hours	
<input type="checkbox"/> Check axle oil level	<input type="checkbox"/> Replace primary fuel filter and water separator
<input type="checkbox"/> Check tandem oil level	<input type="checkbox"/> Replace auxiliary fuel filter and water separator (if equipped)
<input type="checkbox"/> Drain and refill engine oil and replace filter	<input type="checkbox"/> Take hydraulic oil sample
<input type="checkbox"/> Drain and refill engine oil (quick service) (if equipped)	<input type="checkbox"/> Take transmission oil sample
<input type="checkbox"/> Check receiver-dryer moisture indicator	<input type="checkbox"/> Take axle oil sample
<input type="checkbox"/> Check circle gear case oil level	<input type="checkbox"/> Take tandem oil sample
<input type="checkbox"/> Check 6WD hub oil level (if equipped)	<input type="checkbox"/> Take 6WD hub oil sample (if equipped)
<input type="checkbox"/> Lubricate tandem pivots	<input type="checkbox"/> Take engine coolant sample
<input type="checkbox"/> Check brake accumulator	<input type="checkbox"/> Take diesel fuel sample
<input type="checkbox"/> Replace final fuel filter	
Every 1000 Hours	
<input type="checkbox"/> Drain and refill 6WD hub oil (if equipped)	<input type="checkbox"/> Check engine air intake hoses
<input type="checkbox"/> Adjust front wheel bearings (standard axle only)	<input type="checkbox"/> Check coolant condition
<input type="checkbox"/> Replace fast fill fuel breather filter (if equipped)	<input type="checkbox"/> Replace fuel tank breather

## Service Intervals

Every 2000 Hours	
<input type="checkbox"/> Drain and refill axle oil	<input type="checkbox"/> Clean engine crankcase ventilation tube
<input type="checkbox"/> Drain and refill transmission oil	<input type="checkbox"/> Replace axle oil filter
<input type="checkbox"/> Drain and refill transmission oil (quick service) (if equipped)	<input type="checkbox"/> Replace hydraulic oil filter
<input type="checkbox"/> Replace rear axle breather filter and hydraulic tank breather filter	<input type="checkbox"/> Replace transmission oil filter
<input type="checkbox"/> Drain and refill circle gear case oil	<input type="checkbox"/> Replace 6WD hydraulic oil filter (672, 772, and 872)
<input type="checkbox"/> Check and adjust engine valve lash	<input type="checkbox"/> Replace diesel exhaust fluid (DEF) dosing unit filter
Every 4000 Hours	
<input type="checkbox"/> Drain and refill hydraulic tank oil	<input type="checkbox"/> Replace diesel exhaust fluid (DEF) breather
<input type="checkbox"/> Drain and refill hydraulic tank oil (quick service) (if equipped)	<input type="checkbox"/> Clean diesel exhaust fluid (DEF) tank
<input type="checkbox"/> Drain and refill tandem oil	<input type="checkbox"/> Replace diesel exhaust fluid (DEF) header suction filter
<input type="checkbox"/> Clean transmission pump inlet screen	<input type="checkbox"/> Replace diesel exhaust fluid (DEF) baffle
Every 6000 Hours	
<input type="checkbox"/> Drain, flush, and refill cooling system	<input type="checkbox"/> Drain, flush, and refill cooling system (quick service) (if equipped)